




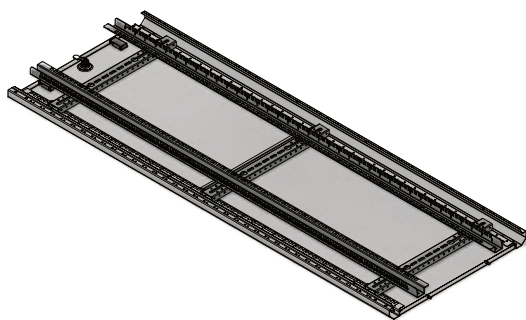


1-Raplace the side panel module to the level surface.

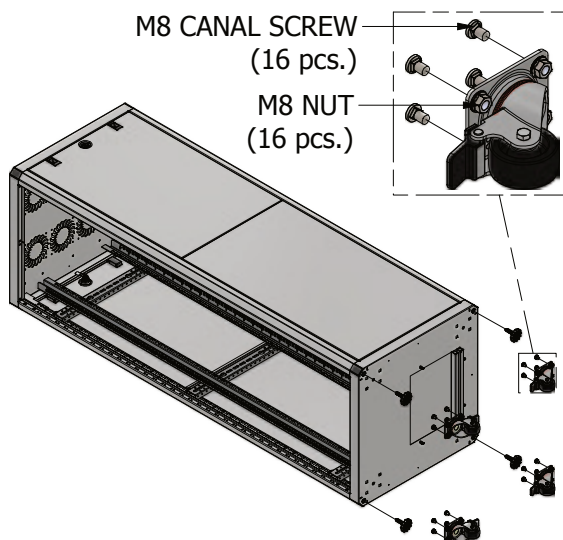


3-Screw down casters to the lower horizontal profiles with M8 Canal Screw and M8 Nut from 4 points and mount pinion feet to lower corner parts.

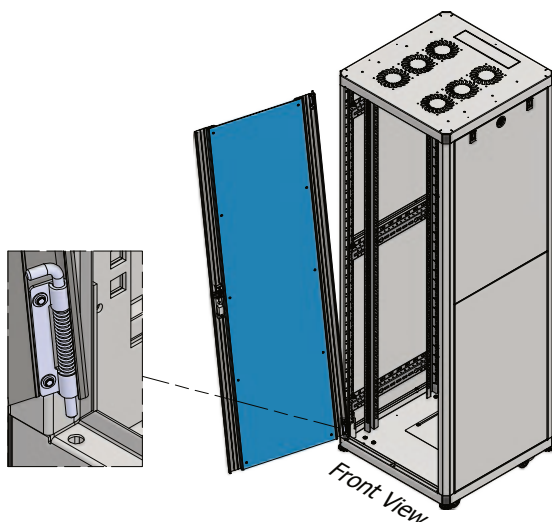


5-Mount the hinge slots on the upper and lower profile of the front door as shown in the picture.

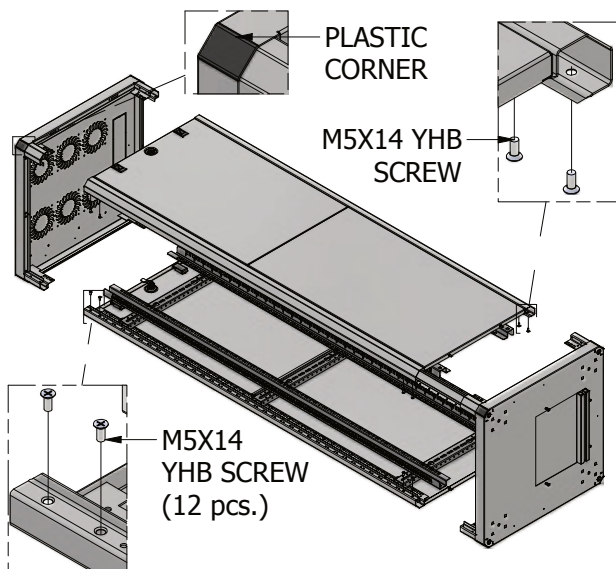

2-Mount other side module of the cabinet, bottom and top chassis with M5x14 YHB screws to matching holes and then mount the plastic corners.

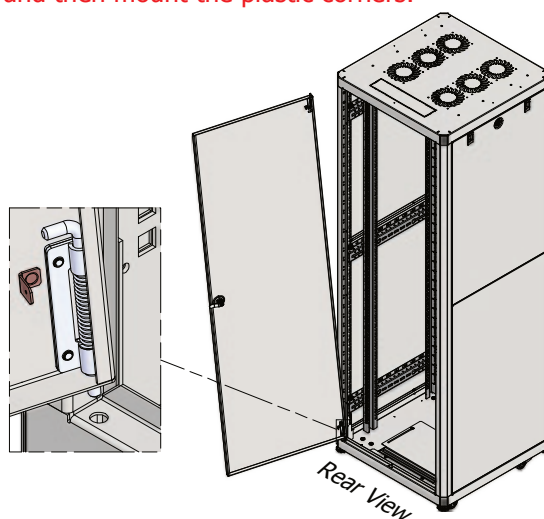

4-Mount the hinge slots on the upper and lower profile of the rear door as shown in the picture.

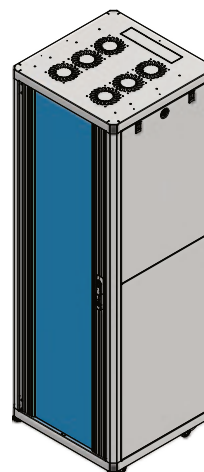

FINAL VIEW