




1-Replace the side panel module to the level surface.

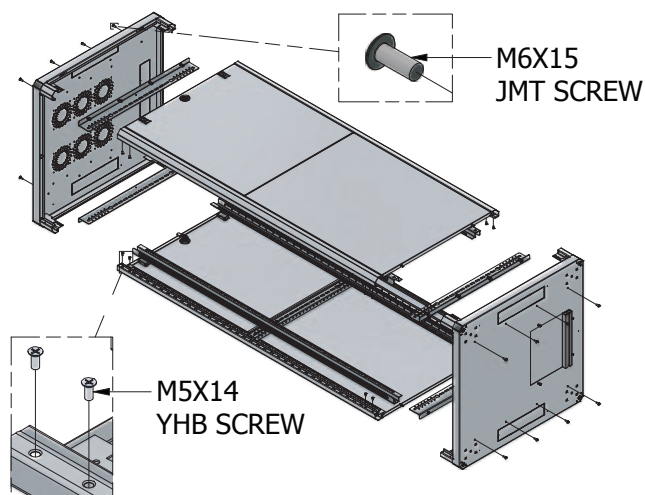


2-Firstly, assemble the mounting rail holder with M6x15 JMT Screw. Mount other side module of the cabinet, bottom and top chassis with M5x14 YHB screws to matching holes. Finally, assemble the plastic parts.

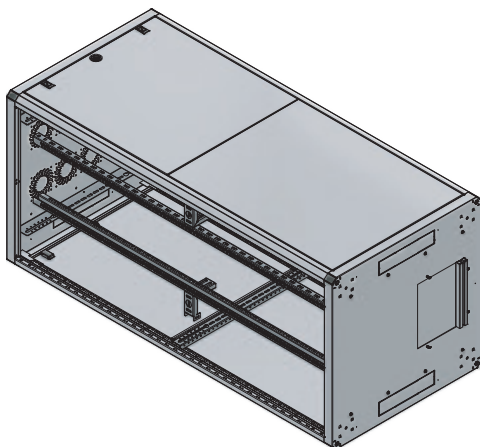

3-Fix off mounting rails, then fix to the horizontal support bar and mounting rail holders with omegas.

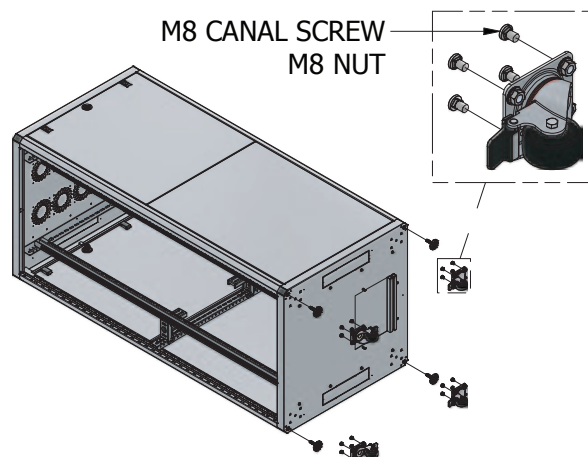

4-Screw down casters to the lower horizontal profiles with M8 Canal Screw and M8 Nut from 4 points and mount pinion feet to lower corner parts.

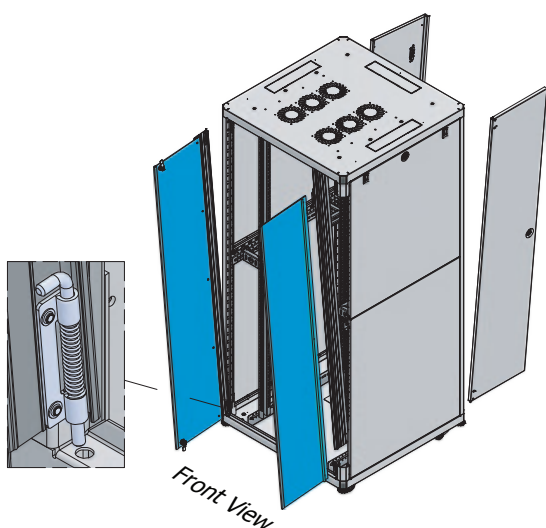

5-Mount the hinge slots on the upper and lower profile of the front and rear door as shown in the picture.

FINAL VIEW

